



Installation

Remove the Old Valve Assembly

- ☐ Turn off the water supplies. Turn on the faucet to relieve the water pressure.
- ☐ Loosen the setscrew at the back of the handle with a 5/64" hex key (not provided).
- ☐ Unscrew the handle.
- ☐ Remove the remaining handle components so the valve nut is accessible. You may need a small blade or screwdriver to lift the cap. Be careful not to scratch the finish.
- ☐ Remove the valve nut with a wrench or 1-1/8" (2.8 cm) deep socket (not provided).
- ☐ Pull the valve out of the faucet body.

Install the New Valve Assembly

- ☐ Insert the new valve into the faucet body. Align the tabs on the valve with the holes in the faucet body. Make sure that the tabs are seated.
- ☐ Reinstall the nut. Tighten the nut one quarter-turn past hand-tight.
- ☐ Reassemble the handle parts in the order that they were removed.
- ☐ Turn on the water supply and check for leaks.