

	Item.	Code.	Part.	Description
Name of the second seco	Items	Included	with RESS F	Retrofit and Complete Sloan SOLIS®
	Valves			on one and complete clean co-lo
	1	0325300	EBV-304-A	Cover/Sensor/Assembly - Closet SOLIS 1.6 &
				1.28 gpf Electronic Single Button Flush
TI .		_	EBV-379-A	Cover/Sensor/Assembly - Closet SOLIS 1.1 gpf
		0372024	WES-24-A	Electronic Single Button Flush Cover/Sensor/Assembly - Closet SOLIS Electronic
\sim 14		03/2024	WL3-24-A	Dual Flush
		0325301	EBV-306-A	Cover/Sensor/Assembly - Urinal 0.5 & 1.0 gpf
				SOLIS Electronic Single Button
		0325328	EBV-328-A	Cover/Sensor/Assembly - Urinal 0.25 gpf SOLIS
3		0325394	EBV-385-A	Electronic Single Button Cover/Sensor/Assembly - Urinal 0.125 gpf SOLIS
13		0323334	EBV-303-A	Electronic Single Button
1 4 12		0325320	EBV-320-A	Cover/Sensor/Assembly - Closet 1.6 & 1.28 gpf
				SOLIS Electronic Single Button Flush
15		0070000	\MEO 00 A	fits Zurn* valve bodies
		03/2028	WES-28-A	Cover/Sensor/Assembly- Closet SOLIS Electronic Dual Flush - fits Zurn* valve bodies
		0325321	EBV-321-A	Cover/Sensor/Assembly Urinal 0.25 gpf SOLIS
Serve Wester			251 021 71	Electronic Single Button - fits Zurn* valve bodies
6 J TOUCH TO	2	0325311	EBV-311-A	Cover Assembly - SOLIS Electronic Dual Flush Flush
Waste This new dail face table saves also leader and many and can be asknown for face to be severed to be asknown to be asknown for the contract of the severed to be asknown to be askn		0325309	EBV-309-A	Cover Assembly - SOLIS Electronic Single Button
or Australia, The Salah Proceedings Laboral Health Proceedings or but marine should make a subject to the salah procedure of the salah pr	3	0325804	EBV-14	Flush Locking Ring
10	O	0305843		Locking Ring- fits Zurn* valve bodies
8 (C)	4	0325312	EBV-312-A-C	Module - SOLIS - Water Closet
Chicopto		0325313	EBV-312-A-U	Module - SOLIS - Urinal
		0325397	EBV-388-A EBV-382-A	Module - SOLIS - Urinal 0.125 gpf Module - SOLIS - 1.1 qpf Single Button Flush
16 17		0372038	WES-33-A	Module - SOLIS - 1.1 gpr Single Button Flush Module - SOLIS - Water Closet (Dual Flush)
18	5	0325171	EBV-134	Cover Rest Plate
	6	3325456	EBV-145-A	Inside Cover Assembly (includes solenoid)
19	7	3325453	EBV-136-A	Solenoid
	8 9	†		Flex Tube Diaphragm Assembly Flush Volume Regulator
11	10	+		Cartridge Assembly (OBSOLETE)
1	11	3325814	EBV-1017-A	Handle Cap (RESS Retrofit Models Only)
	12	0325107		Range Adjustment Tool
	13	0305823		Strap Wrench
	14 15	0325159 0372029		7/64" Hex Wrench English Plate (Dual Flush only)
20A → 20B → 20C →	10	0372025		Spanish Plate (Dual Flush only)
	Items	Included	with Comple	ete Sloan SOLIS® Valves Only
	16		H-633-AA	1" (25 mm) Sweat Solder Kit
22A	17		H-636-AA H-700-A	34" (19 mm) Sweat Solder Kit 1" (25 mm) Bak-Chek® Control Stop
	17		H-700-A	34" (19 mm) Bak-Chek® Control Stop
	18		H-1010-A	Vandal Resistant Stop Cap
= \ 22A = \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	19	0305381	EBV-36-A	Valve Body
	20A	_	V-600-AA	1½" (38 mm) x 10½" (229 mm) Vacuum Breaker
		_	V-600-AA	(Model 8111) 1½" (38 mm) x 15" (584 mm) Vacuum Breaker
			V 000 7V1	(Model 8113)
		_	V-600-AA	1½" (38 mm) x 23" (584 mm) Vacuum Breaker
			V COO AA	(Model 8115)
		_	V-600-AA	1½" (38 mm) x 26" (660 mm) Vacuum Breaker (Model 8116)
	20B	_	V-600-A	3" (76 mm) Vacuum Breaker Assembly
	20C	_	V-600-AA	34" (19 mm) x 101/2" (229 mm) Vacuum Breaker
	04		F 100	(Model 8186)
	21 22A	 0306146	F-109 F-5-ΔT	1½" (38 mm) Elbow Flush Connection

[†] Part No. varies depending on flushometer model.

0306146 F-5-AT

22B **0306125** F-5-AW

Manufactured in the U.S.A. by Sloan Valve Company under one or more of the following patents: U.S. Patents: D598,975; D599,436; 7,124,997. Other Patents Pending. BAK-CHEK®, PARA-FLO®, PERMEX®, TURBO-FLO®.

1½" Spud Coupling Assembly (Models 8110, 8110 8115 & 8116)

34" Spud Coupling Assembly (Model 8186)

22A

^{*}Zurn* is a registered trademark of Zurco, Inc. Use of "Zurn" is for identification purposes only and does not imply affiliation, endorsement, or association between Sloan and Zurco, Inc.



ITEM 8. FLEX TUBE DIAPHRAGM KIT SELECTION GUIDE

Code No.	Part No.	Description	Regulator Color
3325001	EBV-1020-A	1.6 gpf/6.0 Lpf Closet	GREEN
3325031	EBV-1024-A	1.28 gpf/4.8 Lpf Closet	GREEN
_	EBV-1028-A	1.1 gpf/4.2 Lpf Closet	GRAY
3325003	EBV-1023-A	0.5 gpf/1.9 Lpf Urinal	GREEN
3325090	EBV-1025-A	0.25 gpf/10 Lpf Urinal	GREEN

The EBV-1020-A Kit is supplied with multiple Flush Volume Regulators. The installer must use the correct Regulator when installing the kit.

EBV-1025-A includes H-1015A Flow Control


ITEM 9. REGULATORS

The flush volume of the flex tube diaphragm kit is controlled by the regulator. Regulators are identified by color. Some flex tube diaphragm kits are supplied with multiple regulators. The installer must make sure the proper regulator is used when installing the flex tube diaphragm kit.

REGULATOR (SOLD 6 PER PACKAGE)

Code No.	Part No.	Description	Regulator Color
5325122	EBV-95	Urinal-0.5 gpf/1.9 Lpf	GREEN
5325122	EBV-95	Closet-1.6 gpf/6.0 Lpf	GREEN

FLEX TUBE DIAPHRAGM ASSEMBLY

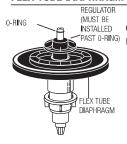

REGULATOR (MUST BE INSTALLED diaphragm for the ultimate in valve performance, PAST 0-RING) reliability and chloramine resistance.

ITEM 19D. SLIP JOINT GASKETS AND RINGS

Size	Code No.	Part No.	Description
1-1/2"	5306058	F - 3	Red Friction Ring
	5322001	VBF-5	Black Slip Joint Gasket
	0319086/5319086	S-30	Flexible Seat
	0319079	S-21	Rigid Seat (rubber over brass)
1-1/2" x 1-1/4"	0396062	F-105	Slip Joint Gasket – Rigid
1-1/4"	5306057	F - 3	Red Friction Ring
	5322176	VBF-5	Black Slip Joint Gasket
	0307052/5307052	G-21	Rigid Seat (rubber over brass)
1"	5306056	F - 3	Red Friction Ring
	5306115	F - 5	Black Slip Joint Gasket
3/4"	5306055	F - 3	Red Friction Ring
	5306113	F - 5	Black Slip Joint Gasket

OPERATION


- 1. A continuous, INVISIBLE light beam is emitted from the SOLIS® sensor.
- 2. As the user enters the beam's effective range, 22 to 42 inches (559 mm to 1067 mm) for closet installations and 15 to 30 inches (381 mm to 762 mm) for urinal installations, the beam is reflected into the scanner window to activate the output circuit. Once activated, the output circuit continues in a "hold" mode for as long as the user remains within the effective range of the sensor. For dual-flush models, if the user stays longer than 65 seconds, a full flush will automatically initiate when the user leaves. For single-flush models, once the user steps away, a full flush will automatically initiate.
- 3. For dual-flush models, once a user is detected, if the user leaves in 65 seconds or less, a reduced flush will automatically initiate. The circuit automatically resets and is ready for the next user. For single-flush models, when the user steps away, this initiates a full flush. The circuit automatically resets and is ready for the next user.








SQUAT TOILET

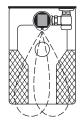


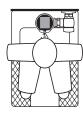

URINAL





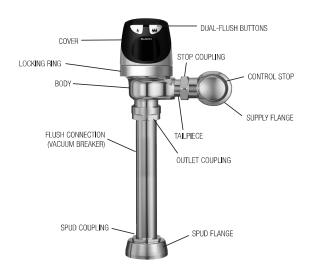




BATTERY REPLACEMENT

When required, replace batteries with four (4) Alkaline AA-size batteries.

Note: Water DOES NOT have to be turned off to replace batteries.

Loosen the two (2) screws on top of unit. Remove the complete cover assembly. Lift the sensor module from its plate. Unplug the electrical connector from battery compartment cover. Loosen the retaining screw on battery compartment cover and remove battery compartment cover. Install four (4) Alkaline AA-size batteries **exactly** as illustrated.

Install battery compartment cover and secure with retaining screw. Make certain that battery compartment cover is fully compressed against gasket to provide a seal; **DO NOT** overtighten. Plug the electrical connector into the battery compartment cover. Reinstall the sensor module onto the plate. Reinstall the complete Cover Assembly onto the plate. Tighten the two (2) screws on top of the unit.

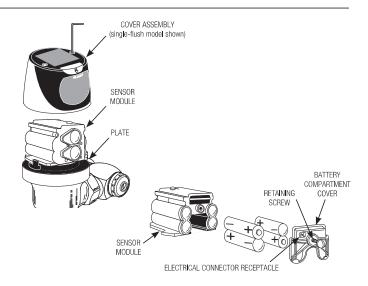

RANGE ADJUSTMENT (ADJUST ONLY IF NECESSARY)

The SOLIS® has a factory set sensing range:

Water Closet Models - 22" to 42" (559 mm to 1067 mm)

Urinal Models - 15" to 30" (381 mm to 762 mm)

The Factory setting should be satisfactory for most installations.

If the range is too short (i.e., not picking up users) or too long (i.e., picking up opposite wall or stall door) the range can be adjusted.

Note: Water DOES NOT have to be turned off to adjust range.

Loosen the two screws on top of the unit and remove cover. Remove the rubber plug from top of electronic sensor module to uncover the potentiometer.

RANGE ADJUSTMENT PROCEDURE

For the first ten (10) minutes of operation, a visible light flashes in the sensing window of the SOLIS® flushometer when a user is detected. This visible light feature can be reactivated after ten (10) minutes by opening and closing the battery compartment door.

Check the range by stepping toward the unit until the light flashes, indicating the sensor's maximum detection limit. Adjust the range potentiometer screw located on top of the sensor module a few degrees CLOCKWISE to increase the range or a few degrees COUNTERCLOCKWISE to decrease the range. Repeat this adjustment until the desired range is achieved.


Always determine the sensing range with metal cover and lens window on top of the unit.

IMPORTANT: Adjust in small increments only! Range potentiometer adjustment screw rotates only ¾ of a turn; DO NOT over-rotate.

When range adjustment is satisfactory, replace the Rubber Plug. Reinstall Cover and tighten the two Screws on top of the unit.

IMPORTANT: Adjust in small increments only! Range potentiometer adjustment screw rotates only 3/4 of a turn; DO NOT over-rotate.

When range adjustment is satisfactory, replace the rubber plug. Reinstall cover and tighten the two screws on top of the unit.

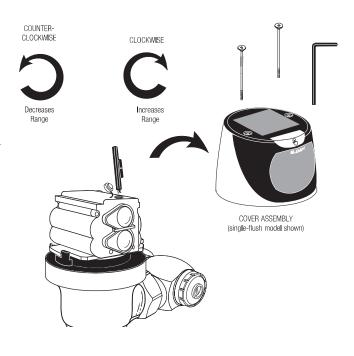

RECOMMENDED WALL PLATE LOCATIONS



Centered over flushometer





TROUBLESHOOTING GUIDE

1. Sensor flashes continuously only when user steps within range.

A. Unit in start-up mode; no problem. This feature is active for the first ten (10) minutes of operation.

2. Valve DOES NOT flush; sensor not picking up user.

A. Range too short; increase the range.

Valve DOES NOT flush; sensor picking up opposite wall or surface, or only flushes when someone walks by. Light flashes continuously for first 10 minutes even with no one in front of the sensor.

A. Range too long; shorten range.

4. Valve DOES NOT flush even after adjustment.

- A. Range adjustment potentiometer set at full "max" or full "min" setting. Readjust potentiometer away from full "max" or "min" setting.
- B. Batteries completely used up; replace batteries.
- C. Problem with electronic sensor module; replace electronic sensor module

5. Unit flashes 4 quick times when user steps within range.

A. Batteries low; replace batteries.

6. Valve DOES NOT shut off.

A. Bypass orifice in diaphragm is clogged with dirt or debris, or bypass is clogged by an invisible gelatinous film due to "over-treated" water. Remove flex tube diaphragm and wash under running water.

Note: Size of orifice in the bypass is of utmost importance for the proper metering of water by the valve. DO NOT ENLARGE OR DAMAGE THIS ORIFICE. Replace flex tube diaphragm if cleaning does not correct the problem.

- B. Dirt or debris fouling stem or flex tube diaphragm. Remove flex tube diaphragm and wash under running water.
- C. O-ring on stem of flex tube diaphragm is damaged or worn. Replace o-ring if necessary.
- D. Problem with electronic sensor module; replace sensor module.

7. Not enough water to fixture.

- A. Wrong flush volume regulator installed in flex tube diaphragm kit. Install the correct regulator.
- B. Wrong SOLIS® model installed; i.e., 1 gpf. Urinal installed on 3.5 gal. closet fixture. Replace with proper SOLIS® model.
- C. Enlarged bypass in diaphragm. Replace flex tube diaphragm.
- D. Control stop not adjusted properly. Readjust control stop.
- E. Inadequate volume or pressure at supply. Increase water pressure or supply (flow) to valve. Consult factory for assistance.

8. Too much water to fixture.

- A. Wrong flush volume regulator installed in flex tube diaphragm kit. Install the correct regulator.
- B. Control stop not adjusted properly. Readjust control stop.
- C. Wrong SOLIS model installed; i.e., 3 gpf. model installed on 1.0 or 1.5 gal. Urinal fixture. Replace with proper SOLIS mode.
- D. Dirt in diaphragm bypass. Clean under running water or replace flex tube diaphragm.

Note: The EBV-46-A beam deflector is not required or available for the SOLIS®.

CARE AND CLEANING INSTRUCTIONS

DO NOT USE abrasive or chemical cleaners to clean flushometers as they may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** soap and water, then wipe dry with clean cloth or towel.

While cleaning the bathroom tile, the flushometer should be protected from any splattering of cleaner. Acids and cleaning fluids can discolor or remove chrome plating.

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).